

X4 | HANGING KITS



X4 | HANGING KITS



1

Remove 4 of the screws on the top plate of the X4 and screw in the SMALL CANONS. Refer to Fig 1A
NOTE: With the small TOOL, loosen inside of the SMALL CANON. Refer to Fig 1B



Fig. 1A



Fig. 1B

2

Push one end of the SHORT WIRE into the top opening on the SMALL CANON and tighten using the SMALL TOOL. Refer to Fig 2A
Thread the other end of this SMALL WIRE through the small holes on the LARGE CANON.
NOTE You may need to loosen the LARGE CANON at the bottom with the LARGE TOOL in order to feed the wire through. Refer to Fig 2B



Fig. 2A



Fig. 2B

3

Now push the other end of the SMALL WIRE through the top of the other SMALL CANON and tighten using the SMALL TOOL. Refer to Fig 3.

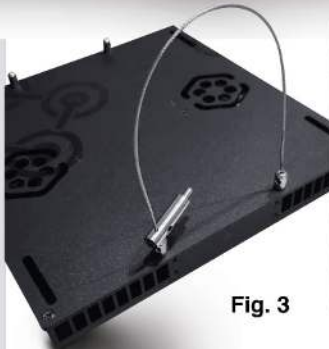


Fig. 3

X4 | HANGING KITS



4

Now pull on the **LARGE CANON** to centre it on the **SMALL WIRE**. When you're happy that it's centred, secure the **LARGE CANON** in position by tightening at the bottom with the **LARGE TOOL**. Refer to Fig 4.



Fig. 4

5

You may now feed the **LARGE WIRE** through each **LARGE CANON** to achieve your desired height and angle. Refer to Fig 5.



Fig. 5

